




Professional Radio

GP540/GP580



User Guide

68P64120B21

Issue: July 2002

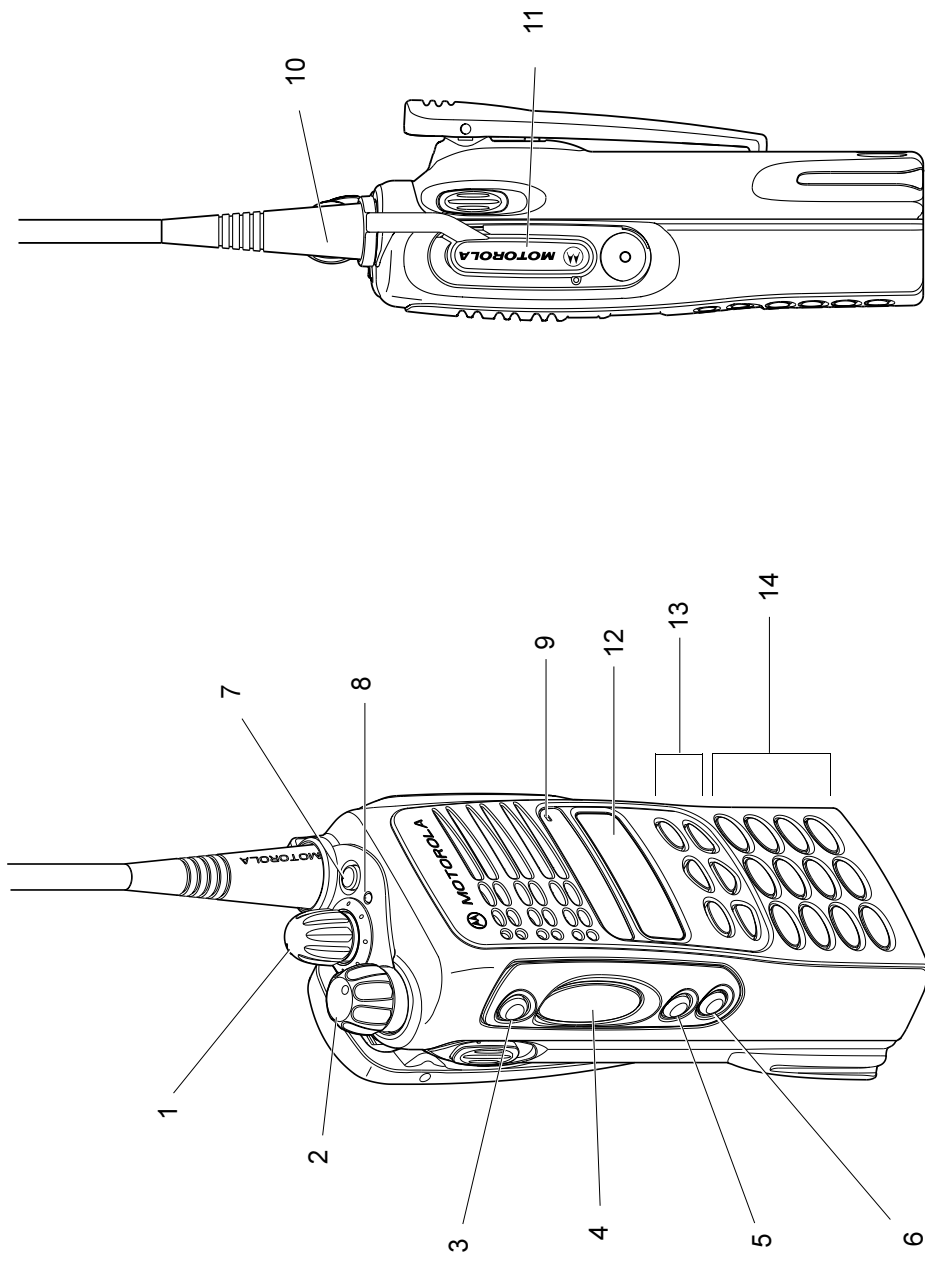

GP580

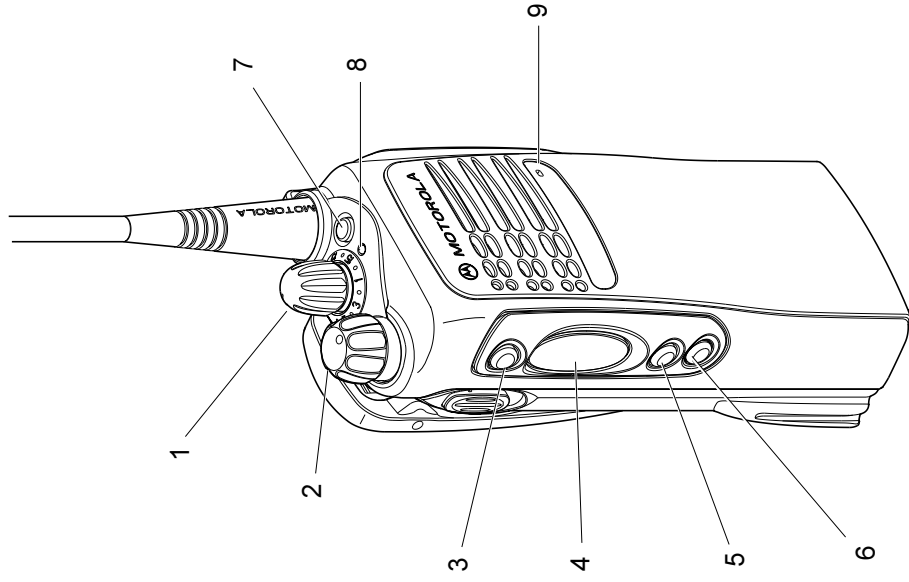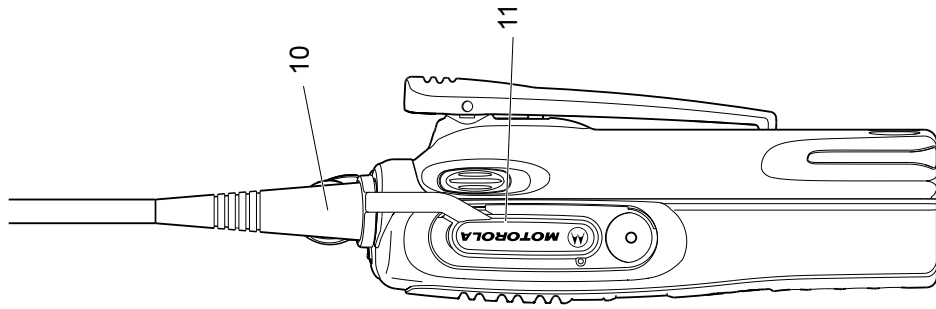

GP540

CONTENTS

Radio Overview	4
Operation and Control Functions	4
Radio Controls	4
Programmable Buttons	6
Keypad Keys (GP580 radios only)	8
Menu Keys (GP580 radios only)	9
Selecting a Feature	9
Menu Display	10
LCD Screen and Icons	10
Alert Tone Indications	11
Getting Started	13
Battery Information	13
Battery Care and Tips	13
Recycling or Disposal of Batteries	14
Charging the Battery	14
Accessory Information	15
Attaching the Battery	15
Removing the Battery	15
Attaching the Antenna	16
Removing the Antenna	16
Attaching the Belt Clip	17
Removing the Belt Clip	17
Attaching the Dust Cover	18

Radio Operation	19
Turning The Radio On or Off	19
Adjusting the Radio's Volume	19
Radio Self Test	19

Basic Radio Calls	20
Selecting a Zone and Mode	20
Selecting a Zone	
(GP580 radios only)	20
Selecting a Mode	20
Receiving a Call	21
Making a Call	21
Conventional Modes	21
Trunked Modes	21
Low-Battery Alert	22
Coded Squelch Operation	22
Variable RF Power Level	
(Selected Models Only)	22
Failsoft Operation	
(Trunked Systems Only)	22
Muting the Keypad Tones	
(GP580 Radios only)	23

Trunked Features	24
Viewing Your Radio's ID Number	24
Enhanced Private Call Operation	24
Answering a Private Call	24
Making a Private Call (GP580 radios only)	25
Leaving a Call Alert Page (GP580 radios only)	28
Call Alert Operation	28
Answering a Call Alert Page with a Group Call	28
Making a Call Alert (GP580 radios only)	29
Automatic Multiple Site Selection (AMSS)	31
Viewing the Current Site	31
Forcing a Site Change	32
Locking and Unlocking a Site	32
Conventional Features	33
Repeat/Direct	33
Smart PTT	33
Scan	35
Scan Operation	35
Turning Scan On or OFF with the Keypad (GP580 radios only)	35

Deleting Nuisance Modes	36
Viewing a Scan List (GP580 radios only)	36
Programming a Scan List (GP580 radios only)	37
Scan Modes	38

Programming the Radio Lists (GP580 radios only).....39

Programming the Telephone List Numbers	39
Programming the Call List	40

Telephone Operation.....42

Answering a Telephone Call	42
Making a Telephone Call (GP580 radios only)	42

Special Features46

Emergency Operation	46
Sending an Emergency Alarm	46
Sending a Silent Emergency Alarm	47
Canceling an Emergency Alarm	47
Sending an Emergency Call	47
Ending an Emergency Call	48
Emergency with Voice to Follow	48

Dynamic Regrouping	48
Mode Selection	48
Select Enable and Disable	49

SmartZone Operation 50

Benefits of SmartZone™	50
Site Switching in SmartZone	51
Viewing the Current Site	52
Forcing a Site Change	52
Locking and Unlocking a Site	52
Preferred Site Selection	52
Busy Override	53
Site Trunking	54

Stat-Alert Features 55

Viewing Your Radio's ID Number	55
Stat-Alert Voice Selective Call Operation	55
Receiving a Voice Selective Call	56
Making a Voice Selective Call (GP580 radios only)	56
Stat-Alert Call Alert Operation	58
Receiving a Call Alert Page	58
Making a Call Alert (GP580 radios only)	59
PTT-ID	60
Radio Check	61
Emergency Operation	61

Notes 62

Computer Software Copyright

The products described in this manual may include copyrighted computer programmes stored in semiconductor memories or other media. Laws in the United States of America and other countries preserve for Motorola Europe and Motorola Inc. certain exclusive rights for copyrighted computer programmes, including the right to copy or reproduce in any form the copyrighted computer programme. Accordingly, any copyrighted computer programmes contained in the products described in this manual may not be copied or reproduced in any manner without the express written permission of the holders of the rights. Furthermore, the purchase of these products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of the holders of the rights, except for the normal non-exclusive royalty free licence to use that arises by operation of the law in the sale of the product.

RADIO OVERVIEW

This user guide covers the operation of the GP580/ GP540 Portable Radio.



Caution

Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet 68P64117B25_ enclosed with your radio.

ATTENTION!

This radio is restricted to occupational use only to satisfy ICNIRP RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet (Motorola Publication part number 68P64117B25_) to ensure compliance with RF energy exposure limits.

OPERATION AND CONTROL FUNCTIONS

Radio Controls

Refer to the illustrations on the inside front cover (GP580) and inside rear cover (GP540).

- 1. Mode Selector Knob**
Used to select the required operation mode.
- 2. On-Off / Volume Knob**
Used to turn the radio on or off, and to adjust the radio's volume.
- 3. Side Button 1/Select Key (programmable)**
Recommended for the Monitor Button. Also functions as the select key when programming your radio's lists.

- 4. Push to Talk (PTT) Button**
Press and hold down this button to talk, release it to listen.
- 5. Side Button 2 (programmable)**
- 6. Side Button 3 (programmable)**
- 7. Top Button (programmable)**
Recommended as Emergency button.
- 8. LED Indicator**
The indicator LED on top of the radio indicates radio operating conditions.

With PTT switch pressed (radio transmitting)

Continuous red LED	Normal transmission.
LED unlit	Radio is not transmitting.
Blinking red light	Low battery (conventional mode only; programmable from the CPS)

With PTT switch released (radio receiving)

Blinking red light	Mode busy (conventional mode only).
Blinking green light	Receipt of a telephone call, Private Conversation call, or Call Alert page.

9. Microphone

Speak clearly into the microphone when sending a message.

10. Antenna**11. Accessory Connector**

Connects headsets, remote speaker/microphones and other accessories. Replace attached dust cover when not in use.

Additionally for GP580 radios

12. LCD Screen**13. Menu Keys****14. Keypad**

Programmable Buttons

Several of your radio buttons can be programmed (by using the Customer Programming Software — CPS) to activate the radio features.

Programmable buttons are

- Top button
- Three side buttons

Check with your dealer or Motorola representative for a complete list of the functions your radio's programmable buttons support.


The table below shows the functions available by

- **short press** - quickly pressing and releasing the programmable buttons, or
- **long press** - pressing and holding the programmable buttons for a period of time before releasing, or
- **hold down**- pressing and holding down the programmable buttons while checking status or making adjustments.

Button	Short Press	Long Press	Hold Down
Permanent Monitor/ Monitor	—	Continually monitors the selected channel.	Monitors the selected channel for any activity.
Volume Set	—	—	Sounds a tone for adjusting the radio's volume level.
Scan	Toggles between the start/stop of the Scan operation.	—	—
Nuisance Delete	Temporarily deletes an unwanted non-priority active scan member.	—	—
Search	Makes a system search.		
Light	Turns on/off your radio's backlight.	—	—
Emergency	Enters Emergency mode.	Leaves Emergency mode.	—
Call	Enters or exits a Private call.		
Page	Enters or exits a Call Alert.		

Button	Short Press	Long Press	Hold Down
Call Response	Respond to or exit from a Private Call or Call Alert.	—	—
Phone	Enters or leaves Phone mode.	—	—

Keypad Keys (GP580 radios only)

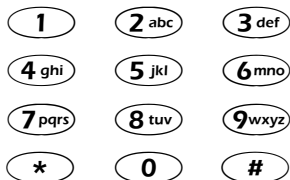

These keys are used when dialing a phone number, making a radio call or entering information for programming the radio's lists.

The following table shows the character cycle for each key, when entering information for programming the radio's lists.


Key	Number of Times the Key is Pressed					
	1	2	3	4	5	6
0	0					
1	1	Blank space				
2 abc	A	B	C	2		
3 def	D	E	F	3		
4 ghi	G	H	I	4		

5 jkl	J	K	L	5		
6 mno	M	N	O	6		
7 pqrs	P	Q	R	S	7	
8 tuv	T	U	V	8		
9 wxyz	W	X	Y	Z	9	
*	*					
#	#	-	+	.	/	\

Note: The sequence in the table above is valid when entering information on a blank display. However, when editing existing information, the above sequence may differ. For instance, if the last character entered is a "R", pressing 7 pqrs to enter the next character, would start the character cycle at "S" and **NOT** at "P".

- When editing existing information, pressing 1 would **ALWAYS** start the character cycle at the "blank space" and **NOT** at "1".

Menu Keys (GP580 radios only)

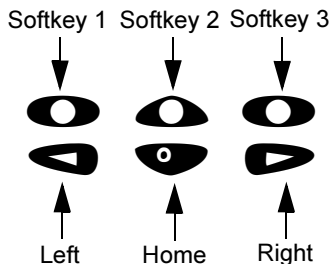

Selecting a Feature

A unique feature of your radio is its use of the display to give you quick access to many of the radio's features without having to have a dedicated key for each feature.

The names of the features (CALL, MUTE, etc.) are shown on the display, three at a time. Selection of features is controlled by the three keys directly below the feature names: the left key controls the left feature, the middle key controls the middle feature, and the right key controls the right feature.

Softkeys (●●●)

When already in Menu Mode, these keys are used to make Menu selections.

Left and Right Arrow Keys (◀▶)

The left and right arrow keys are used to scroll the display forward or backward through the radio's features and lists. There is no end point to the list, so if you continue to scroll in one direction, the display will "wrap around" back to the beginning of the list. If you hold either key down, the display will scroll at a faster rate until the key is released.

The left arrow key is also used for editing when you are entering information manually from the keypad.

Pressing the left arrow key, when editing numeric information (such as telephone numbers), will backspace, and erase the display, one character at a time. If you have erased all the digits, an additional press of the left arrow key will return the display to the pre-programmed list.

Pressing the left arrow key, when editing alphabetic information (such as member's names), will move the cursor one step to the left.

HOME Key (●)

The HOME key will always return you to the home (default) display. In most cases, this is the current mode. In addition, if you are using a feature that requires it, pressing the HOME key will also cause information to be saved in memory before going to the home display. Some radio features will automatically go to the home display when they are completed,


without having to press the HOME key, thus reducing the number of key presses required.

Menu Display

The menu items can be displayed in normal video or in reversed video (programmable through the CPS). All the menu items in the examples in this manual are shown in reversed video.

The order in which the menu items are displayed is programmable. Thus, the order of the menu items on your radio may differ from those shown here in this manual. In such a situation, press the relevant softkey to make your menu selections. All descriptions of functions and displays after the selection are valid.



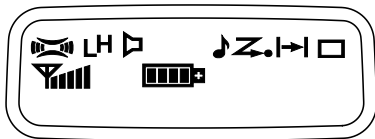

LCD Screen and Icons



Displays mode selected, channel, menu, and radio status information. The top two screen rows show

radio status indicator symbols, explained in the following table.

Symbol	Name and Description
	XPAND™ Indicator Indicates that your radio has the companding feature activated.
LH	Power Level Indicator L lights up when your radio is configured to transmit in Low Power. H lights up when your radio is configured to transmit in High Power.
	Carrier Squelch Indicator Indicates when the active conventional mode is being monitored in the carrier squelch mode; ON = BEING MONITORED/ OFF = NOT BEING MONITORED.
	Call Received Flashes when a call or page is received.
	Scan Indicator Indicates when the radio is scanning; ON = SCANNING/OFF = NOT SCANNING.
	Priority Scan The presence of a dot along with the scan annunciator indicates the receiving of a priority mode; BLINKING DOT = PRIORITY 1 SOLID DOT = PRIORITY 2.

Symbol	Name and Description
	Direct Indicates whether you are talking directly to another radio (talkaround), or through a repeater; ON = DIRECT OFF = REPEATER.
	Programming/Viewing Mode Indicates when the radio is in the programming or viewing mode; ON = IN VIEWING MODE BLINKING = IN PROGRAMMING MODE.
	Signal Quality Indicator Shows the radio signal quality. Five bars indicates the best signal (Smart Zone Only).
	Battery Level Indicator Shows the remaining charge in your battery, based on how many bars are displayed. Flashing, indicates flat battery.

Alert Tone Indications

Your radio generates a number of audible tones to indicate radio operating conditions:

- **Low Battery** – A low-battery condition is indicated by a high-pitched, cricket-like “chirp-chirp” when the PTT switch is released following a transmission.
- **Successful Power-Up** – A short, medium-pitched tone when the radio is first turned on indicates that the radio has passed its power-up self test and is ready for use.
- **Unsuccessful Power-Up** – A short, low-pitched tone when the radio is first turned on indicates that the radio has failed its power-up self test and is not ready for use. Contact your service representative for service.
- **Transmit on Receive-Only Mode** – If you press the PTT switch while tuned to a “receive-only” mode, you will hear a continuous, low-pitched alert tone, indicating that no transmission is possible on this mode. This tone will continue until the PTT switch is released.
- **Transmit Inhibit on Busy Mode** – If you press the PTT switch while the mode is busy, you will hear a continuous, low-pitched alert tone, indicating that no transmission is possible on this mode. This tone will continue until the PTT switch is released.
- **Transmit Inhibit on Flat Battery** – If you press the PTT while the battery is flat, you will hear a continuous, low pitched alert tone, indicating that transmission is impossible.
- **Invalid Mode** – A continuous, low-pitched tone is heard when an invalid or unprogrammed operation is attempted on the radio.

- Valid (Good) Key Press – A short, medium-pitched tone when a keypad key is pressed indicates that the key press was accepted.
- Invalid (Bad) Key Press – A short, low-pitched tone when a keypad key is pressed indicates that the key press was rejected.
- Emergency Alarm Entry – A short, medium-pitched tone when the emergency button is pressed indicates that the radio has entered the emergency mode.
- Emergency Alarm/Call Exit – A continuous, medium-pitched tone when the radio is in the emergency mode indicates that the radio has exited the emergency mode.
- Failsoft (Trunked Systems Only) – A faint “beeping” tone every ten seconds indicates that the radio is operating in the failsoft mode.
- Time-Out Timer Warning – Your radio’s time-out timer limits the length of your transmission time. When you are pressing the PTT switch (transmitting), a short, low-pitched warning tone will sound four seconds before the allotted time will expire.
- Time-Out Timer Timed-Out – If you hold down the PTT switch longer than the time-out timer’s allotted time, a continuous, low-pitched tone will sound, indicating that your transmission has been cut off. This tone will continue until the PTT switch is released.
- Phone Busy – A “bah-bah-bah-bah” tone when telephone interconnect is accessed indicates that all available modes are busy and the radio is in queue for the next available phone line.
- Call Alert (Page) Received – A group of four medium-pitched tones every five seconds indicates that your radio has received a Call Alert page.
- Call Alert (Page) Sent – A single medium-pitched tone (central acknowledge), followed by a group of four medium-pitched tones indicates that a Call Alert page sent by your radio has been received by the target radio.
- Private Conversation Call Received – A group of two medium-pitched tones indicates that your radio has received a Private Conversation call. This sequence is repeated every five seconds for approximately 20 seconds for enhanced Private Conversation.
- Trunked System Busy (Trunked Systems Only) – A “bah-bah-bah-bah” tone when a trunked system is accessed indicates that all available channels are busy and the radio is in queue for the next available channel.
- Call Back (Trunked Systems Only) – A group of three medium-pitched tones (di-di-dit) indicates that a talkgroup is now available for your previously requested transmission.

GETTING STARTED

BATTERY INFORMATION

Battery Care and Tips

This product is powered by a nickel-cadmium (NiCd), nickel-metal-hydride (NiMH), or lithium-ion rechargeable battery.

The following battery tips will help you obtain the highest performance and longest cycle life from your Motorola rechargeable battery.

- Charge your new battery overnight (**14-16 hours**) before using it to obtain maximum battery capacity and performance.
- Charging in non-Motorola equipment may lead to battery damage and void the battery warranty.
- When charging a battery that is attached to the radio, turn the radio off to ensure a full charge.
- The battery should be at about 25°C (room temperature) whenever possible. Charging a cold battery (below 10°C) may result in leakage of electrolyte and ultimately, in failure of the battery.
- Charging a hot battery (above 35°C) results in reduced discharge capacity, affecting the performance of the radio. Motorola rapid-rate battery chargers contain a temperature-sensing circuit to ensure that the battery is charged within these temperature limits.
- New batteries can be stored up to two years without significant cycle loss. Store new/unused batteries in a cool dry area.
- Batteries which have been in storage should be charged overnight.
- Do not return fully charged batteries to the charger for an “extra boost”. This action will **significantly** reduce cycle life.
- Do not leave your radio and battery in the charger when not charging. Continuous charging will shorten battery life. (Do not use your charger as a radio stand.)
- For optimum battery life and operation use only Motorola brand chargers. They were designed to operate as an integrated energy system.

Recycling or Disposal of Batteries



At the end of its useful life, the NiCd battery can be recycled. However, recycling facilities may not be available in all areas.

Motorola endorses and encourages the recycling of all re-chargeable batteries. Contact your local Motorola dealer for further information.

Charging the Battery

If a battery is new, or its charge level is very low, indicated by battery level indicator showing one or no segments, you will need to charge the battery before you can use it in your radio.

Note: Batteries are shipped uncharged from the factory. New batteries could prematurely indicate full charge, charge a new battery for 14-16 hours before initial use.

Charger LED	Status
Red	Battery is charging
Green	Battery is fully charged
Flashing Red *	Battery is unchargeable
Flashing Yellow	Charger is getting ready to charge
Flashing Green	Battery is 90% charged

* Battery is damaged. Please contact your dealer.

1. Place the radio with the battery attached, or the battery alone, in the charger.
2. The charger's LED indicates the charging progress.


Battery chargers will charge only the Motorola authorized batteries listed below; other batteries will not charge.

Part No.	Description
HNN9008	High-Capacity NiMH
HNN9009	Ultra-High-Capacity NiMH
HNN9010	Ultra-High-Capacity FM NiMH
HNN9011	High-Capacity FM NiCd
HNN9012	High-Capacity NiCd
HNN9013	Lithium-Ion

FM - Factory Mutual


ACCESSORY INFORMATION

Attaching the Battery

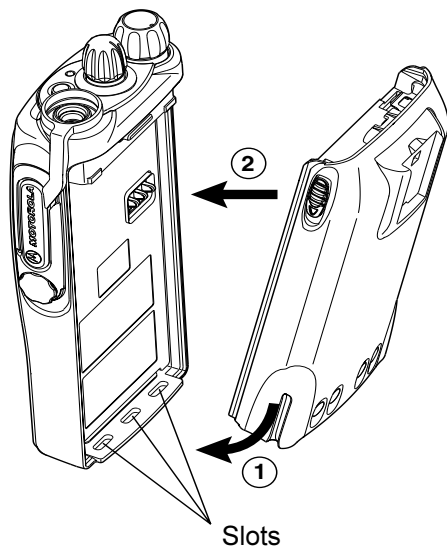


1. Fit the extensions at the bottom of the battery into the slots at the bottom of the radio's body.
2. Press the top part of the battery towards the radio until you hear a click.

Removing the Battery

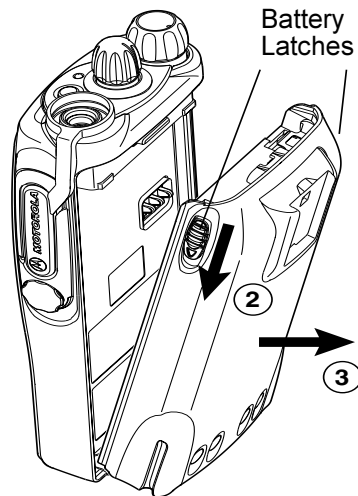


1. Turn off the radio, if it is turned on.
2. Slide the battery latches, on both sides of the battery, downwards.
3. Pull the top part of the battery away from the radio's body, and remove the battery.

Attaching the Antenna

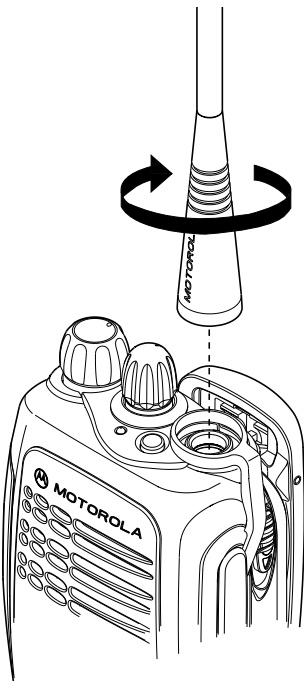


1. Align the threaded end of the antenna with the radio's antenna connector.
2. Turn the antenna clockwise to fasten it.

Removing the Antenna

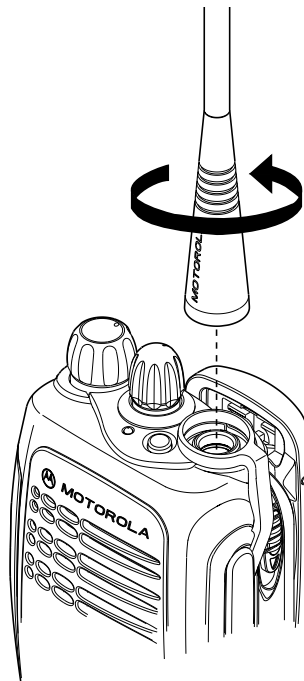


- Turn the antenna counterclockwise until you can remove it.

Attaching the Belt Clip

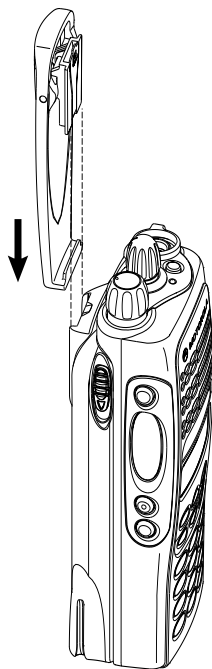


1. Align the grooves of the belt clip with those of the battery.
2. Press the belt clip downwards until a click is heard.

Removing the Belt Clip

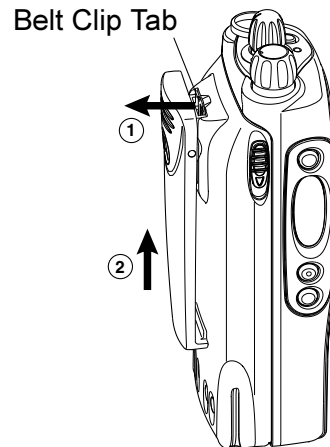


1. Use a key to press the belt clip tab away from the battery.
2. Slide the belt clip upwards to remove it.

Attaching the Dust Cover

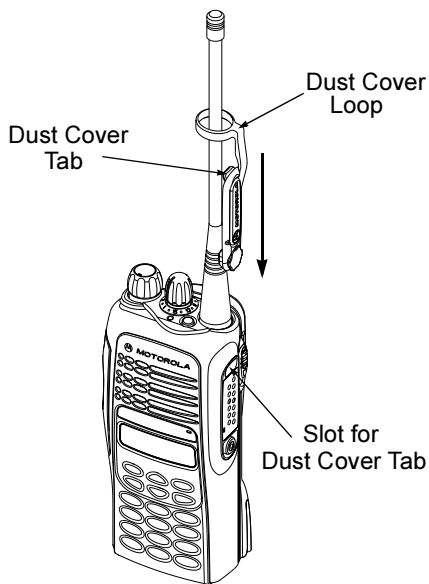


1. Place the dust cover loop over the attached antenna.
2. Slide the loop all the way down to the base of the antenna.
3. Insert the dust cover tab into the slot above the connector.

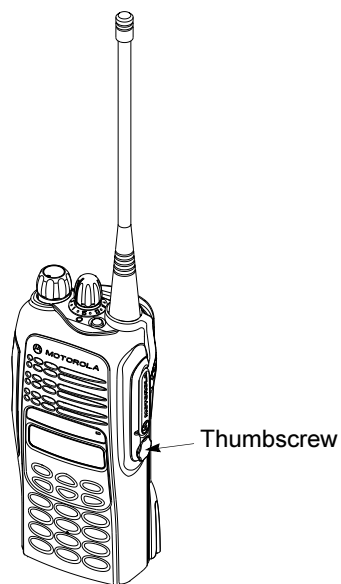

4. Tighten the thumbscrew to hold the cover in place. **DO NOT** overtighten the thumbscrew.

RADIO OPERATION

Turning The Radio On or Off

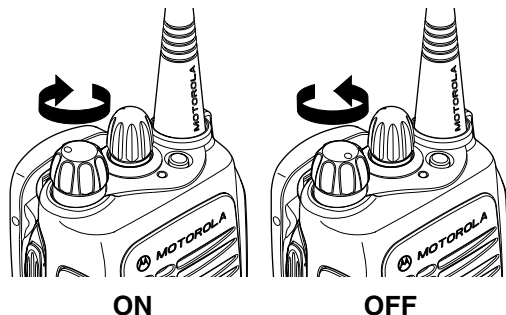

To turn the radio on, turn the **On-Off/Volume Control** knob clockwise.

To turn the radio off, turn the **On-Off/Volume Control** knob counterclockwise until you hear a click.

Adjusting the Radio's Volume

Turn the **On-Off/Volume Control** knob to adjust the volume level.

Listen until you hear a transmission, then adjust the volume control for a comfortable listening level.

Or, if a button is programmed for “volume set,” press this button and adjust the volume to a comfortable listening level.

Radio Self Test

Turn the radio on by rotating the volume control clockwise. The radio goes through a power-up self check and, if it passes the check, the display momentarily shows “SELF TEST.” A good-power-up, high-pitched tone sounds to indicate that the radio has passed the self check.

If the radio fails the self check, the display shows “ERROR XX/XX” (where XX/XX is an alphanumeric error code), accompanied by a bad-power-up, low-pitched tone. Turn the radio off, check the battery, and turn the radio back on. If the radio still does not pass the self check, a problem exists in the radio. Contact your nearest Motorola Service Shop.

- The power-up self check verifies that the radio's microprocessor-based systems are working, but it does not check all of the rf components, nor does it check the operation of all customer-specific features. Motorola recommends that the functionality of the radio be periodically checked by an authorized Motorola service shop.

BASIC RADIO CALLS

This section outlines the basic functions of your radio. All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below





PLANT POLICE


is used to indicate the radio's home display.

SELECTING A ZONE AND MODE

A *mode* is a channel or talkgroup and all the features that are programmed to it. A *zone* is a grouping of modes that is selected using the menu keys. Before you use your radio to receive or send messages, you should first select the desired zone and mode.

Selecting a Zone (GP580 radios only)

1. Press  until **ZONE** is displayed. 
2. Press  (the soft-key below **ZONE**).
The current zone name blinks on the display. For example 

3. Press  until the desired zone name is displayed.

—or—

Enter the number of the desired zone.

For example


 
CITY POLICE

4. Press .

5. The displayed zone is the new selected zone.

CITY POLICE

Selecting a Mode

1. Turn the *mode selector knob* to the desired mode.
2. The display shows the selected mode's name. For example 
3. If the selected mode is unprogrammed, an invalid-mode tone is heard until a valid programmed mode is selected. 

RECEIVING A CALL

1. Turn the radio on and select the desired zone and mode (see *Selecting a Zone and Mode*).
2. Your radio is now set to receive calls on the selected mode.

MAKING A CALL

Conventional Modes

1. Turn the radio on and select the desired conventional zone and mode (see *Selecting a Zone and Mode*).
2. Press and hold the PTT switch on the side of the radio and speak slowly and clearly into the microphone area. The red LED lights continuously when the radio is transmitting.
3. When you have finished talking, release the PTT to listen.

Note: Do not interrupt another user. If the present mode is programmed to receive PL, ensure that the mode is not in use by pressing the monitor button to listen for activity.

- If the mode-busy feature is enabled, a blinking red LED on receive (PTT released) indicates that the mode is currently busy.
- If a mode is programmed for receive only, any attempt to transmit on that mode will cause an invalid-mode tone to sound until the PTT switch is released.

Trunked Modes

1. Turn the radio on and select the desired trunked zone and mode (see *Selecting a Zone and Mode*).
2. Press and hold the PTT switch on the side of the radio and speak slowly and clearly into the microphone area. The red LED lights when the radio is transmitting. When you have finished talking, release the PTT to listen.

Note: If you hear a busy signal (a low-frequency “bah-bah-bah-bah”), release the PTT switch and wait for a call-back tone (sounds like “di-di-dit”). When you hear the call-back tone you will have three seconds to press the PTT switch. This allows you to make another call without getting a busy signal.


- If a continuous talk-prohibit tone is heard when the PTT switch is pressed, transmission is not possible. The radio may be out of range.

Low-Battery Alert

Your radio emits an alert tone when a low-battery condition is detected.

Coded Squelch Operation

Tone Private-Line (PL), Digital Private-Line (DPL), and carrier squelch operation are all available in your radio, on a per-mode basis. When in carrier squelch operation, all traffic on the mode is heard. When in PL or DPL operation, your radio responds to only those messages intended for you. When this feature is mode-slaved, PL, DPL, or carrier squelch is programmed to each mode.

Whenever the radio is operating in carrier squelch, the display will show .


 
Variable RF Power Level (Selected Models Only)

Radios can have more than one power level. High power can be programmed on modes where high power is permitted, and low power can be programmed on all other modes. The high-/low-power feature can be selected via the menu keys.

FAILSOFT OPERATION (TRUNKED SYSTEMS ONLY)



The “failsoft” system ensures continual radio communications capability during a trunked system failure. Your radio will automatically go into failsoft operation, if the central trunking controller fails for any reason. While in failsoft operation, your radio will transmit and receive on a predetermined frequency on a conventional mode. When the trunked system returns to normal operation, the radio will automatically leave the failsoft operation and return to trunked operation.


During failsoft operation,

1. You will hear a faint “beeping” sound every ten seconds. Alternates between  and 
2. Your radio becomes unsquelched.

MUTING THE KEYPAD TONES (GP580 RADIOS ONLY)

The radio's keypad tones, normally heard each time a keypad key is pressed, can be turned off (muted) or on (unmuted) at your discretion. To use the keypad mute feature

1. Press  until *MUTE* is displayed. 

2. Press  (the softkey below *MUTE*). You will see the current mute state momentarily.



or




Then



3. Press the softkey below the desired mute state (on or off). The radio returns to the home display.



Note: Pressing  or the PTT switch will exit this menu without changing the mute selection.

TRUNKED FEATURES

This section outlines the trunked features of your radio. All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.

VIEWING YOUR RADIO'S ID NUMBER

To view your radio's ID number

1. Press  until *CALL* is displayed.

ZONE MUTE CALL

2. Press  (the softkey below *CALL*).


3. The display shows the last ID number transmitted or received.

ID: 722588

4. Press .

5. The display shows your radio's ID number.

MY ID: 741317

6. Press  to return the radio to the home display.

PLANT POLICE

Note: If your radio has been so programmed, you can press the call button for quick access to view the last ID number transmitted or received. This takes you directly to step 3.

ENHANCED PRIVATE CALL OPERATION

The Enhanced Private Conversation feature not only allows you to have a conversation that is heard only by the two parties involved, but also enables you to determine whether the radio that you are calling is in service. The radio being called can also view the calling radio's ID number before answering. You can then choose whether or not to leave your radio's ID number (via a Call Alert page) with the radio you are calling so that you may be called back. Enhanced Private Conversation operation is similar to telephone operation.

Answering a Private Call


1. Upon receiving a Private Conversation call, two alert tones sounds (repeating every five seconds for 20 seconds).

Alternates between

CALL RECEIVED

and

PLANT POLICE

- The green LED and call received status annunciator, , will blink indicating that a call is being received. You have 20 seconds to answer the call before the radio automatically returns to the home display.

- Press the call response button or the call button.

- The display shows the incoming caller's ID number, and the call received annunciator will turn off.


ID: 722588

- After viewing the caller's ID number, you can decide to either talk privately (go to next step), or not answer the call by pressing the call response or call button to return to the home display.

- If you decide to answer the call, press the PTT switch.

- The caller's ID number remains displayed for the duration of the call.

ID: 722588

- When finished with conversation, press  or the call response button to hang up.

- The radio will return to the home display.

PLANT POLICE

Note: If you press the PTT switch before you press the call response button, the response will be transmitted to everyone in the talkgroup (a dispatch mode operation).

- After answering a Private Call, the caller's ID number is stored in your radio as the "*last ID number received*".
- If your radio is configured for Private Call II, upon receiving a Private Conversation call, two alert tones sounds, followed by the received voice.

Making a Private Call (GP580 radios only)

There are four phases in making a private call, namely

- initiating a private call,
- entering the desired radio ID number,
- sending the radio ID number, and
- having the conversation and hanging-up.

Initiating a Private Call

- Press  until *CALL* is displayed.

ZONE MUTE CALL

- Press  (the softkey below *CALL*).

3. The display shows the last ID number transmitted or received.

ID: 722588


Entering the Desired Radio ID Number


If the last ID number called is the desired number, go directly to step 5.

To enter a new number





- 4a. Enter the new six-digit ID number using the keypad.
- 4b. On the display, the old ID number disappears and the new digits appear as they are being entered.
- 4c. The cursor flashes indicating the location of the next number to be entered.

Note: Exactly six digits must be entered for the radio ID number. If fewer than six digits were entered, you will hear a bad-keypress tone and the display will show "INVALID ENTRY" when attempting to send the radio ID number. A bad-keypress tone will also be heard if you try to enter a seventh digit.

- Once you have started entering numbers, the  key functions as a backspace key. Pressing it causes the last digit entered to be

erased, and the cursor moves to the left. When the last digit is erased, an additional press of this key causes the last ID number transmitted or received to be displayed; pressing  shows the first member of the list.

To enter a number from the call list

- 4a. Press either  or .
- 4b.  takes you forward to the first or next member of the list;  takes you backwards to the last or previous member of the list.
- 4c. When at a member of the list, the display alternates between showing the member's name and ID number.



Alternates between

JB SMITH

and

ID: 784116

To enter a number from a location in the call list

- 4a. Press either  or  to enter the call list.
- 4b. Enter the first digit of the location number. If there are fewer than 10 members in the list, go directly to step 4e.

- 4c. If there are 10 or more members in the list, the display shows “ID LOC#X_” (where X is the first digit). The cursor blinks to show the location of the second digit.

- 4d. Enter the second digit of the location number.

- 4e. The radio goes to that position in the list. The display alternates between showing the member's name and ID number.
- Alternates between
- JB SMITH and ID: 784116

Note: The last member of the list is also the “last ID transmitted or received” at position “00” on the list.

- If you enter a location number that does not exist (for example, “15”), the display will show “INVALID ENTRY,” and the radio will sound an invalid-keypress tone and return back to step 4b of this procedure.

Sending the Radio ID Number

5. Press the PTT switch to transmit the ID number.
6. If the radio you are calling is on the air, you will hear a telephone-type ringing for 20 seconds, or until the called radio answers the call.

7. If the party you are calling does not answer the call within twenty seconds, the telephone ringing stops and an alert tone sounds.

NO ANSWER


At this point you can either send a Call Alert page, or go to step 10 to hang up.

8. If the party you are calling answers the call, you will hear his/her voice.

Note: If the radio you are calling is not in service, you will not hear the ringing and the display will show “NO ACK”. Go to step 10 to hang up.

- If your radio is configured for Private Call II, you will not hear the telephone type ringing. Instead you are able to proceed to talk to the Called party.

Having the Conversation and Hanging-up


9. Press the PTT switch to have a Private Conversation with the called person.
10. When finished with your conversation, or if the radio you called does not answer or is not in service, press  to hang up.

- The radio will return to the home display.

PLANT POLICE

Note: Once engaged in a private conversation, if the radio is left idle for more than one minute, a momentary warning alert sounds every six seconds to remind you that dispatch calls are not being heard. After two minutes, a permanent invalid mode tone sounds.


Leaving a Call Alert Page (GP580 radios only)

- If the party you want to have a Private Call does not answer the call within twenty seconds, you can choose to leave a Call Alert page. This leaves your radio's ID number with the called radio so you can be called back later.
- Press the PTT switch to send the Call Alert page. You will hear five beeps, indicating that the system has received your ID number and the radio you are calling is on the air.
- Press .
- The radio will return to the home display.

PLANT POLICE

CALL ALERT OPERATION

Answering a Call Alert Page with a Group Call

- Upon receiving a Call Alert page, four alert tones sounds (repeats every 5 seconds).
- The green LED lights and the Call Received annunciator, , blinks indicating a call is received.
- Press the PTT switch to answer the page.
- The display shows the current talkgroup. The audible alert, LED and call received annunciator turns off.
- The ID number of the radio that paged you is stored as "the last ID number received."
- Have your conversation in the normal manner; all members of your talkgroup will hear your response. Press the PTT switch to talk; release the switch to listen.

FIRE DEPT

Note: When you received a Call Alert page, you can enter Private Call mode and call the paging radio using the latest ID received.

Making a Call Alert (GP580 radios only)


There are three phases in making a call alert, namely

- initiating a call alert,
- entering the radio ID number that you wish to page, and
- sending the call alert.

Initiating a Call Alert

1. Press  until **PAGE** is

PAGE PHON VIEW

2. Press  (the softkey below **PAGE**).

3. The display shows the last ID number transmitted or received.

ID: 722588

Note: The same list is shared by both Call Alert and Private Conversation features.

- If your radio has been so programmed, you can press the page button for quick access to the Call Alert feature. This will take you directly to step 3.



Entering the Radio ID Number that you wish to Page

If the last ID number called or received is the desired number, go directly to step 5.

To enter a new number



- 4a. Enter the new six-digit ID number using the keypad.
- 4b. On the display, the old ID number disappears and the new digits appear as they are being entered.
- 4c. The cursor flashes indicating the location of the next number to be entered.

Note: Exactly six digits must be entered for the radio ID number. If fewer than six digits were entered, you will hear a bad-keypress tone when attempting to send the radio ID number. A bad-keypress tone will also be heard if you try to enter a seventh digit.


 
- Once you have started entering numbers, the  key functions as a backspace key. Pressing it causes the last digit entered to be erased, and the cursor moves to the left. When the last digit is erased, an additional press of this key causes the last ID number transmitted or received to be displayed; pressing  shows the first member of the list.

To enter a number from the call list



- 4a. Press either  or .

4b.  takes you forward to the first or next member of the list;  takes you backwards to the last or previous member of the list.

4c. When at a member of the list, the display alternates between showing the member's name and ID number.

Alternates between

 and


To enter a number from a location in the call list

4a. Press either  or  to enter the call list.

4b. Enter the first digit of the location number. If there are fewer than 10 members in the list, go directly to step 4e.

4c. If there are 10 or more members in the list, the display shows "ID LOC#X_" (where X is the first digit). The cursor blinks to show the location of the second digit.

4d. Enter the second digit of the location number.

4e. The radio goes to that position in the list. The display alternates between showing the member's name and ID number.

Alternates between



and



Note: The last member of the list is also the "last ID transmitted or received" at position "00" on the list.

- If you enter a location number that does not exist (for example, "15"), the display will show "INVALID ENTRY," and the radio will sound an invalid-keypress tone and return back to step 4b of this procedure.


Sending the Call Alert

5. Press the PTT switch to transmit the ID number.

If the page is unsuccessful

- 6a. If you hear one beep, the ID number has been received by the system, but the radio you are paging is not on the air; your radio remains in the Call Alert mode.

If after six seconds the called radio fails to acknowledge the alert, a low-pitched alert tone sounds and the display changes to **"NO ACKNOWLEDGE"**.

- 6b. Press the PTT switch to send the ID number again, or press  to hang up and return to the home display.

If the page is successful

- 6a. If you hear five beeps, the ID number has been received by the system, and the radio you are paging is on the air and has received your page.

- 6b. The radio automatically returns to the home display

PLANT POLICE

AUTOMATIC MULTIPLE SITE SELECTION (AMSS)

The automatic multiple site selection (AMSS) feature extends communications beyond the reach of a single trunked site. In a system where wide-area coverage is required, multiple trunking sites are used.

AMSS automatically switches the radio to a different site when the current-site signal becomes too weak. Typically, this happens when the radio is moved out of the range of one site and into the range of another. Under normal conditions, this switching is invisible to the user.

Viewing the Current Site

1. Press the search button.

2. If the radio is locked on a site, the display shows the current site.

SITE 4



3. If the radio is scanning for a new site, the display shows **"SCANNING SITE"** until it locks on a new site.

SCANNING SITE








Then it shows the number of the new site.

SITE 7

Forcing a Site Change

1. Press and hold down the search button to force the change to a new site.
 2. You will hear a tone while the radio scans for a new site. 
 3. The radio automatically returns to the home display. 
-

Locking and Unlocking a Site

1. Press  until *SITE* is displayed. 
 2. Press  (the softkey below *SITE*).
 3. The current lock state is momentarily displayed. 
or

 4. The display changes to 
 5. Press the key below the desired lock state.
 6. The radio automatically returns to the home display. 
-

CONVENTIONAL FEATURES

This section outlines the conventional features of your radio. All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.


REPEAT/DIRECT

The repeat/direct feature allows you to bypass the repeater and talk directly to another portable radio. This is known as DIRECT operation. The transmit frequency is the same as the receive frequency.

- In REPEAT operation, you talk through the repeater, which increases the radio's operating range. The transmit frequency is not the same as the receive frequency.
- If the repeat/direct feature is programmed to a mode, that mode operates on either direct or repeat operation.
- If the repeat/direct feature is programmed to the keypad, you can change the repeat/direct setting by doing the following.

1. Press  until *DIR* is displayed.

DIR PWR PROG

2. Press  (the softkey below *DIR*).

3. The current talkaround state appears on the display for a few seconds.


REPEATER MODE

or

DIRECT MODE

4. Then, the display prompts for the new state.

DIR RPTR

5. Press  below the desired talkaround state: repeat (*RPTR*) or direct (*DIR*).

6. The radio returns to the home display.

PLANT POLICE

SMART PTT

Smart PTT is a per-mode feature which gives the system manager better control of radio operators. When smart PTT is enabled in your radio, you cannot transmit on an active mode. Three radio-wide variations of smart PTT are available.

- **Transmit Inhibit on Busy Mode**—you are prevented from transmitting if any activity is detected on the mode.

- **Transmit Inhibit on Busy Mode with Wrong Squelch Code**—you are prevented from transmitting on an active mode with a squelch code other than your own. If the PL code is the same as yours, you are allowed to transmit.
- **Quick-Key Override**—This feature can work in conjunction with either of the two above variations. This feature allows you to override the transmit-inhibit state by quick-keying (two PTT presses within a programmable period -- the default is one second -- of each other) the radio.

Note: If you try to transmit (press the PTT) on a smart PTT mode that is busy, a continuous alert tone is generated until the PTT is released; the transmission is inhibited.

- The red LED blinks when the radio is receiving indicating that the mode is busy.

SCAN

This section outlines the scan functions of your radio. All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.

SCAN OPERATION

The scan feature allows you to monitor activity on different conventional or trunked modes by scanning a *scan list* of modes. This list can be programmed with the Customer Programming Software (CPS) or user programmable.


Three types of scan operation are available depending on radio model.

Trunking Priority Monitor	Comprises modes that are all from the same trunked system.
Conventional	Comprises conventional-only modes.
Talkgroup Scan	Comprises conventional modes and trunked modes from more than one trunking system. Priority operation is NOT available in this type of list.

Your radio may support both priority and non-priority scanning. With priority scanning enabled, a scan list can have one mode assigned as the first priority mode, and a second as the second priority mode.

Automatic scanning (autoscan) can be programmed through the CPS. If autoscan is enabled for a mode, your radio begins scanning, using the mode's scan list, whenever you select that mode. The radio will continue autoscanning until you select a mode that does not have autoscan enabled.

Turning Scan On or OFF with the Keypad (GP580 radios only)

1. Press  until **SCAN** is displayed.

PHON SCAN CALL

2. Press  (the soft-key below **SCAN**).

You will see the current scan state momentarily.

SCAN ON

or

SCAN OFF


Then

ON

OFF

3. Press the softkey below the desired scan state (on or off). The radio returns to the home display.

PLANT POLICE

Note: The scan status annunciator, , is displayed when the scan operation is active. It will be removed from the display when the scan operation is terminated.

Deleting Nuisance Modes

When the radio scans to a mode you do not wish to monitor (nuisance mode), you can temporarily delete that mode from the scan list.


1. When your radio is locked on the mode to be deleted, press the nuisance-mode delete button (programmed via the CPS).
2. A valid-keypress chirp is heard, indicating that the mode has been deleted.
3. The radio continues scanning the remaining modes in the list.
4. To resume scanning the deleted mode, you must leave and re-enter scan operation.

Note: Priority modes cannot be deleted.

Viewing a Scan List (GP580 radios only)

The *view scan list* feature allows you to view the members of the scan list associated with the currently selected mode.


To view a scan list

1. Press  until *VIEW* is displayed.

PAGE STS VIEW


2. Press  (the soft-key below *VIEW*).

PHON SCAN CALL


3. Press  (the soft-key below *SCAN*). The display shows the first member of the scan list.



For example

FIRE DEPT

4. Every subsequent press of  will scroll through subsequent members of the scan list.
5. To leave the scan list feature, press the HOME key, or the PTT switch, or turn the mode selector knob.
6. The radio returns to the home display.

PLANT POLICE


 




Note: The programming-mode annunciator, , is displayed while list view mode is active.

- The scan status annunciator, , appears, indicating that a scan list is being viewed.
- The dot of the priority scan annunciator, , blinks if the current displayed member of the scan list is a priority 1 mode, and is solid if the current displayed member of the scan list is a priority 2 mode.




Programming a Scan List (GP580 radios only)


The program scan list feature allows you to program the members of the scan list associated with the currently selected mode.



To program a scan list

1. Press  until *PROG* is displayed. 
2. Press  (the soft-key below *PROG*). 
3. Press  (the soft-key below *SCAN*).
The display shows the current mode selected. 

For example

4. Use the mode selector knob to select the required talkgroup zone.
5. Press  or  to select the required zone. If the scan status annunciator  is displayed, the mode is part of the scan list.
6. Press the select key to change the scan mode (See “Scan Modes” on page 38.).
7. After making all the changes, select the required operating mode.
8. Press the HOME key, or the PTT switch, or turn the mode selector knob to commit all the changes made.

Note: The programming-mode annunciator, , blinks while program mode is active.

- The scan status annunciator, , appears, indicating that a scan list is being viewed.
- The dot of the priority scan annunciator, , blinks if the current displayed member of the scan list is a priority 1 mode, and is solid if the current displayed member of the scan list is a priority 2 mode.

Scan Modes

When programming the scan list, each member can be given one of several scan modes. The following

table lists the scan mode cycle activated by subsequent presses of the select key.

Initial Scan Mode of Member	Number of Times the Select Key is Pressed			
	1	2	3	4
Priority 2*	Priority 1*	Non Scan Member	Scan Member	Priority 2*
Priority 1*	Non Scan Member	Scan Member	Priority 2*	Priority 1*
Non Scan Member	Scan Member	Priority 2*	Priority 1*	Non Scan Member
Scan Member	Priority 2*	Priority 1*	Non Scan Member	Scan Member

* Priority options are only available if enabled.

Note: There can only be **ONE** Priority 1 member and **ONE** Priority 2 member in a scan list. Thus, if there is already a Priority 1 member in the scan list, changing another member's mode to Priority 1, would automatically cause the previous member's mode to be changed to a *Scan Member*. This same behavior is also seen when programming the Priority 2 member.

PROGRAMMING THE RADIO LISTS

This section outlines the programming functions of your radio, and is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.

Programming the Telephone List Numbers

This feature lets you use the radio's keypad to change the telephone numbers assigned to any of the telephone list members. Each phone number can have up to 16 digits.


To change the telephone list

1. Press  until *PROG* is displayed.

PROG

2. Press  (the softkey below *PROG*).

SCAN PHON CALL

3. Press  (the softkey below *PHON*). The display shows the first programmable member of the telephone list.

FIRE DEPT

4. Press  or , —or—

Use the keypad to enter the desired member's position number (1 to 19) to view the members of the telephone list.

5. When you stop on a member of the list, the display will alternate between showing the member's name and telephone number. Alternates between
POLICE DEPT
and
5556213

6. Press the *select* key to enter edit mode.

7. A short press would enable the editing of the telephone number. The display shows the current member's telephone number.

5556213

8. A long press would enable the editing of the member's name. The display shows the current member's name.

POLICE DEPT

9. Use any of the alphanumeric keys to make the changes. The blinking cursor indicates the position of the next number to be added. If you require a pause in the phone dialing sequence (to allow for a delay), you can do so by first pressing the “*” key, followed by pressing the “#” key. The display will show a “P” for pause.

10. When you have finished changing the telephone number, press the *select* key again. The change is saved in the radio’s memory.


11. You are returned to step 5. The display will again alternate between showing the member’s name and telephone number. You can now change additional numbers.

Alternates between

POLICE DEPT


and


5556445


12. When you have finished making changes, press  to exit program mode.

13. The radio will return to the home display.

PLANT POLICE

Note: The programming-mode annunciator, , blinks while program mode is active.

- In the edit mode, the  key functions as a backspace key. Pressing it will erase the previous digit, and the cursor will move to the

left. When the last digit on the display has been erased, additional presses of this key or the  key will cause you to leave the edit mode without making any changes.

- You can only enter a maximum of 16 digits in any entry for the telephone list. When this maximum is reached, the cursor will disappear. If you try to add any more digits, you will hear an invalid (bad) keypress alert tone.

Programming the Call List

This feature lets you use the radio’s keypad to change the radio ID numbers assigned to the call list used by the trunked Private Conversation and Call Alert features. Similarly, in Conventional Mode, you may change the Call List used by Stat-Alert Selective Call and Call Alert.


To change the call list radio ID numbers

1. Press  until *PROG* is displayed.

DIR SCAN PROG

2. Press  (the softkey below *PROG*).

SCAN PHON CALL



3. Press  (the softkey below *CALL*). The display shows the first programmable member of the call list.

A WEST


4. Press  or ,


—or—

Use the keypad to enter the desired member's position number (1 to 19) to view the other members of the call list.

5. When you stop on a member of the list, the display will alternate between showing the member's name and radio ID number.
- Alternates between
- 
- and
- 



6. Press the *select* key to enter edit mode.


7. A short press would enable the editing of the radio ID. The display shows the current member's radio ID number.
- 


8. A long press would enable the editing of the member's name. The display shows the current member's name.
- 


9. Use any of the alphanumeric keys to make the changes. The blinking cursor indicates the position of the next number to be added.



10. When you have finished changing the number, press the *select* key again. The change is saved in the radio's memory.

11. You are returned to step 5. The display will again alternate between showing the member's name and radio ID number. You can now change additional numbers.
- Alternates between
- 
- and
- 

12. When you have finished making changes, press  to exit program mode.

13. The radio will return to the home display.
- 

Note: The programming-mode annunciator, , blinks while program mode is active.

- In the edit mode, the  key functions as a backspace key. Pressing it will erase the previous digit, and the cursor will move to the left. When the last digit on the display has been erased, additional presses of this key or the  key will cause you to leave the edit mode without making any changes.
- When the maximum number of digits for the radio ID is reached, the cursor will disappear. If you try to add any more digits, you will hear an invalid (bad) keypress alert tone.

TELEPHONE OPERATION

This section outlines the telephone operations of your radio. All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.

The telephone feature allows you to use your radio similar to a standard telephone.

When you are dialling from the keypad, your radio may be programmed with either buffered dial (you enter all digits and press the PTT before the digits are sent out) or live dial (each digit is sent out as it is pressed).

Answering a Telephone Call

1. When a telephone call is being received, you will hear telephone-type ringing.

Alternates between
PLANT POLICE


and

PHONE CALL

2. Press the pre-programmed phone button or call response button to answer the call.


PHONE CALL

3. Carry on with your conversation in the normal manner. Press the PTT switch to talk; release the PTT to listen.

4. When you have finished your conversation, press  or the phone button to hang up.

5. The radio will return to the home display.

PLANT POLICE

Note: The call received status annunciator, , flashes when you receive a call, but is not displayed when you answer the call.

Making a Telephone Call (GP580 radios only)

There are three phases in making a phone call, namely

 
- accessing the telephone system,
- sending the telephone number,
- having the conversation and hanging-up.

Accessing the Telephone System

1. Press  until *PHON* is displayed.

MSG SCAN PHON

2. Press  (the softkey below *PHON*).

3. Your radio attempts to access the telephone system.
4. If you connect successfully, you will hear a dial tone.
5. The display will show the last number dialed. 




 
Sending the Telephone Number

Sending the telephone number using the keypad


 
- 6a. The number can now be entered from the keypad, using any of the numeric (0 – 9) keys, and the “*” and “#” keys. The cursor flashes to indicate the location of the next digit to be entered. A pause can be entered in the telephone number by first pressing the “*” key, then the “#” key (Buffered dial only - The pause will be shown on the display as a “P”).
- 6b. If your radio is programmed for “live dial,” each digit is sent out as its key is pressed.
 —or—
 If your radio is programmed for “buffered dial,” each digit is temporarily stored as you enter them. After entering the number, press the PTT switch to send out the number.

- 6c. The telephone number will be sent out; you will hear tones as they are sent. If you hear a busy signal, go to step 8 for hang-up procedure.


Sending the telephone number using a Number on the Telephone List

- 6a. Press  or , to enter the telephone list.  takes you forward to the next member of the list;  takes you backwards to the previous member of the list.

- 6b. Stop at the member you wish to call.



- 6c. The display alternates between showing the member's name and telephone number. Alternates between  and 

- 6d. Press the PTT button.

- 6e. The telephone number will be sent out; you will hear tones as they are sent. 

- 6f. If you hear a busy signal, go to step 8 for hang-up procedure.

Sending the Telephone number using a Location in the Telephone List


- 6a. Press  or , to enter the telephone list.
- 6b. Enter the location (any preprogrammed location from 1 through 19) of the number you wish to call.
- 6c. The radio will go to the selected location.
- 6d. The display alternates between showing the member's name and telephone number.
- Alternates between

POLICE DEPT


and

5556445
- 6e. Press the PTT button.
- 6f. The telephone number will be sent out; you will hear tones as they are sent.
- POLICE DEPT
- 6g. If you hear a busy signal, go to step 8 for hang-up procedure.



Having the Conversation and Hanging Up

7. If call is answered, communicate in the normal manner. Press the PTT switch to talk; release the PTT to listen.
8. When finished with your conversation, or if the number you called is busy or does not answer, press  or the phone button to send the hang-up code.
9. The radio will return to the home display.
- PLANT POLICE

Note: You can press the pre-programmed phone button for quick access to the telephone call feature. This will take you directly to step 3.

- The **"PLEASE WAIT"** message is a timed message. If you cannot access the telephone system (no dial tone heard), press  key or the phone button to hang up, and start again at step 1 of this procedure.
- If you are out of range of the trunked system or the phone interconnect is out of service, **"NO PHONE"** is displayed and a continuous low-pitched tone sounds.
- If the trunked phone interconnect is in use, a busy tone sounds and **"PHONE BUSY"** is displayed.

- When the maximum number of digits have been entered (buffered dial only), the cursor will disappear.

- In the edit mode, the  key functions as a backspace key. Pressing this key erases the last digit entered, and moves the cursor to the left. When the last digit on the display is erased, additional presses of this key causes the last member of the preprogrammed telephone list to be displayed; pressing the  key displays the first member of the list.

- After reaching the number you are calling, you may need to dial an extension number before you can reach your party. Here, enter the extension number from the keypad or (if so programmed) use the arrow keys to find the extension number in the telephone list. If you have live dial, the number is sent as the keys are pressed. If you have buffered dial, press the PTT switch again to send out the extension number.

- Motorola trunked systems and many conventional telephone interconnections generate a high-pitched go-ahead tone when the radio's PTT switch is released. This is heard by the land-line party and is an indicator to begin talking.

- The conventional telephone feature allows you to use your conventional radio similar to a standard telephone. To make a call through the telephone system, your radio must send access and hangup codes to the system. Unless otherwise indicated, the conventional telephone sections in this manual assume that the access and hangup codes have been programmed into the radio by the CPS. These codes will then be automatically transmitted.

SPECIAL FEATURES

This section outlines some of the special features that can be configured for your radio.

All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.

EMERGENCY OPERATION


 
Pressing the top emergency button (for radios with emergency operation) sends out an emergency signal, which takes precedence over any other signalling activity in progress. This emergency signal can take two forms: emergency alarm and emergency call. Your radio can have either or both signal types enabled.

- The **emergency alarm** feature alerts the dispatcher, who is using a special terminal, to an emergency condition and identifies the unit sending the emergency signal.
- The **emergency call** (radios with trunked emergency operation only) is a type of dispatch operation which gives your radio priority access. Emergency call is programmable for either tactical or non-tactical operation.

Tactical emergency operation places the call to the currently selected mode; non-tactical operation places the call to a predetermined emergency mode.

"Emergency" signals a critical situation. It should **NEVER** be used for any other reason.

Sending an Emergency Alarm

1. Press and hold the emergency button (the length of button press is programmable by the CPS). Alternates between

and

2. A short, medium-pitched emergency tone sounds, indicating entry into emergency operation.
3. When the trunked emergency alarm is acknowledged by the central controller, the radio sounds five beeps and the alarm ends.
4. The radio returns to normal operation or, if enabled in your radio (trunked emergency call systems only), enters into emergency call operation.
5. While in emergency call operation, subsequent presses of the emergency button will re-initiate the emergency sequence.

Sending a Silent Emergency Alarm

1. In radios with the silent emergency alarm option enabled, pressing the emergency button sends an emergency signal to the dispatcher.
2. During the emergency alarm procedure: the LED will not light, tones will not sound, and the display will not change.
3. The audio is muted (turned off), and will remain so until you exit the emergency state.

Cancelling an Emergency Alarm

1. Press the emergency button for more than 1.5 seconds (programmable by the CPS).
2. A medium-pitched emergency-exit tone sounds until the button is released and the radio returns to normal operation.

The alarm can also be cancelled (without sounding the emergency-exit tone) by:

- pressing the PTT switch (see following note),
- turning the radio off, or
- receiving an acknowledgment from the dispatcher.

Note: Pressing the PTT switch while the radio is in emergency alarm operation will place the radio in emergency call operation if emergency call is enabled.

Sending an Emergency Call

1. Press the emergency button. Alternates between

EMERGENCY

and

PLANT POLICE

2. A short, medium-pitched emergency tone sounds.
3. Press the PTT switch requesting a priority mode assignment in the trunked system.
4. While the radio is in emergency call operation, it operates in the usual dispatch manner.

Note: The mode you use during an emergency is controlled by whether your radio is programmed for tactical or non-tactical operation. If tactical, you will be talking to the mode you selected before entering emergency call; if non-tactical, you will talk to a preprogrammed emergency mode.

- If you change modes while in emergency call operation, the emergency call is moved and continued on the new mode.

Ending an Emergency Call

It is important that you exit the emergency call mode when you have finished your emergency call.

1. Press the emergency button for more than 1.5 seconds (programmable by the CPS).
2. You will hear a medium-pitched emergency-exit tone until the emergency button is released, and the radio will return to normal operation.

Emergency with Voice to Follow

This feature (aka *Hot Microphone*) places your radio in a transmit mode for a preprogrammed period of time (programmable by CPS) after the emergency alarm is activated. During this time period, voice transmissions can be made without pressing the PTT.

After this transmit time has expired, the unit will revert back to receive mode. Normal operation resumes, and the user is required to press PTT for any further transmissions on that emergency channel.

DYNAMIC REGROUPING

The dynamic regrouping feature allows the dispatcher to temporarily reassign selected radios, operating in the same or different trunked modes, to a single special mode so that they can communicate with each other. This feature, enabled in each radio via the CPS, is typically used during special operations. When your radio has been dynamically regrouped, you will hear a distinct “gurgle” tone.

Mode Selection

You will not notice whether your radio has this feature enabled until a dynamic regrouping is sent by the dispatcher. If you turn your radio's mode selector knob to the dynamic regrouping position without being dynamically regrouped, an invalid-mode tone will be heard.

You can select the dynamic regrouping position using the menu on the display (GP580 radios only) or using the mode selector knob. To do this with the mode selector knob

1. When your radio is dynamically regrouped, you will hear a “gurgle” tone.
2. Your radio is automatically switched to the dynamic regrouping mode. The display shows the name assigned to the dynamic regrouping mode.

3. Turn the mode selector knob to the dynamic regrouping position to transmit on the dynamic regrouping mode.
4. Talk and listen as usual.
5. When the dynamic regrouping is cancelled by the dispatcher:
 - a. If the mode selector knob is in the dynamic regrouping position, an invalid-mode tone is heard until a normal mode is selected.
 - b. If the mode selector knob is in any other mode position, the radio will transmit in the selected mode.

Note: Until you select the correct mode position, you will hear a gurgle tone each time you press the PTT switch, reminding you that you are transmitting on the dynamic regrouping mode, not the mode indicated by the position of the mode selector knob.

Select Enable and Disable

The dispatcher may classify regrouped radios into either of two categories: *select enabled*, and *select disabled*.

Select Enabled	These radios are free to make mode changes to any available mode, including the dynamic regrouping mode.
Select Disabled	These radios cannot change modes, since the dispatcher has specifically chosen to force the radio to remain in the dynamic mode.

Scan, Phone, and Private Conversation cannot be selected while the radio is select disabled.

SMARTZONE OPERATION

This section outlines the SmartZone operations of your radio. All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.

BENEFITS OF SMARTZONE™

Radios that operate in a SmartZone system enjoy the benefits that SmartZone brings over AMSS operation. Like AMSS, SmartZone is a wide-area coverage system that allows multiple sites to be operational in the system. SmartZone brings several enhancements over AMSS operation, as in the following.

1. Dynamic Site Assignment

Allows the zone controller to dynamically assign channels at sites where required, as opposed to bringing up channels at all of the sites as AMSS systems do.

2. Variable Density Sites

SmartZone allows sites to have varying numbers of channel resources to accommodate low-density areas as well as high-density areas.

3. Automatic Site Registration/De-registration

SmartZone radios automatically send in their unit IDs and current mode selections upon power up, power down, site switches, mode changes, and when they exit emergency operation. This allows the zone controller to know where the radio is at all times, and what mode the radio has selected.

4. Critical Site Assignment

One or more sites can be designated as critical sites. This instructs the zone controller to ensure that every site designated as a critical site must have available channel resources, before a channel is given to a radio wishing to be identified as a critical site user. Otherwise a busy will be sent to the unit.

5. Busy Override

This feature allows a SmartZone radio to send a busy override request if a busy is issued. The zone controller sends a grant even though not all of the sites may have available channel resources.

6. Enhanced Automatic Site Switching

SmartZone radios will use RSSI (received signal strength indication) to determine if the radio should switch to another site. This is transparent to the user. In addition, the zone controller continuously transmits adjacent site information to the radios, so that the radio, at any time, is able to switch quickly to the next site that has the highest RSSI rating. This is an enhancement over AMSS systems.

7. Preferred Site

SmartZone radios can program certain sites to be always preferred, most preferred, or least preferred. This gives the user the flexibility to keep a radio on a particular site, regardless of the presence of a stronger signal from an adjacent site. This also forces the radio to always look for its preferred site and use it whenever possible.

8. Site Trunking

If the zone controller loses communication with any site, that site will revert to what is known as "site trunking." While in this condition, radios are still able to operate in the trunking mode, but trunking operations are limited to the site only.

9. Enhanced Failsoft Operation

If a site experiences a complete failure, it will revert to failsoft operation like today's SMARTNET system. A SmartZone radio, however, can be programmed to automatically migrate to the lowest failsoft frequency programmed in its list of 32 control modes. The radio will periodically scan the control mode to check for the presence of a valid control mode (in case the radio roamed into a site which is trunking).

Site Switching in SmartZone

Site Switching in SmartZone mainly uses signal strength to determine whether or not to switch sites. Other factors used are the radio's preferred site selection, and whether the radio is site locked or not. Because the radio knows the site ID, active control mode, and the signal strengths of its adjacent sites, the radio is capable of quickly switching sites.

Viewing the Current Site

1. Press the search button.
 - a. If the radio is presently locked on a site, the display shows either the name of the current site or the site number.

SITE XX
 - b. If the radio is scanning for a new site, the display shows

SCANNING SITE

until it locks onto a new site. This is a timed display which disappears after a few seconds.
 - c. If the radio has not received a site ID, the radio displays

SITE XX

until either the display times out or the radio receives the site ID.

Forcing a Site Change

1. Press and hold down the search button to force the change to a new site.
2. You will hear a tone and the display shows

SCANNING SITE

while the radio scans for a new site.

3. When a new site is found, the new site's name will be momentarily displayed if it is known,

otherwise

SITE XX

Locking and Unlocking a Site

As in an AMSS radio, you can force the radio to stay locked onto a site, regardless of whether the signal level of an adjacent site is higher or not. Of course, locking a radio onto a particular site defeats the automatic site switching mechanisms of the radio. However, you can still force the radio to scan to another site while site locked. The radio automatically becomes site locked to the next site it finds. Refer to *Locking and Unlocking a Site* on page 32 to change the radio's locked state.

Preferred Site Selection

SmartZone radios can have up to eight sites that are individually set as either *always preferred*, *most preferred*, or *least preferred*. The default value is no preference. This feature is programmed via the CPS.

Always-Preferred Site
A SmartZone radio always attempts to stay on this site whenever possible unless the receive signal strength indication (RSSI) level falls below the unacceptable level. The radio periodically checks the RSSI levels of its preferred site(s) to ensure that it always operates on the best preferred site (more than one preferred site can be enabled).
Most-Preferred Site
A site marked in this fashion is one level of preference below <i>always preferred</i> . The radio attempts to remain on this site unless an <i>always-preferred</i> site is determined to have either the same or a higher RSSI level. The radio always determines the best <i>most-preferred</i> site and switches to it whenever possible.
Non-Preferred Site
A radio operating in this site switches sites if an <i>always preferred</i> or <i>most-preferred</i> adjacent site with the same or higher RSSI level is discovered. The radio always determines the best <i>non-preferred</i> site and switch to it whenever possible.

Least-Preferred Site
A radio operating in this site switches sites if any of the above site rankings for any adjacent sites are discovered and their RSSI levels are at least at the acceptable range. The unit always determines the best <i>least-preferred</i> site and switch to it whenever possible.

Busy Override

With the introduction of dynamic site assignment, critical site, and critical user concepts in SmartZone, the busy processing rules were changed to allow users to communicate with some of the trunked mode members instead of waiting for all trunked mode members in all sites to be available. A busy override request can be made to request for the grant, even though one or more non-critical sites are busy. Busy override is not a radio codeplug option but is enabled or disabled via the SmartZone manager.

After you have requested a mode by pressing the PTT, and have received a busy indication

1. Release the PTT and press it again. A busy indication will be received if still busy.

2. Keep the PTT switch pressed for the amount of time specified in the codeplug for *busy override delay time* (typically about three seconds, but can range from two to six seconds).
3. After the timer times out, if the PTT is still pressed, the busy override request is sent.
4. A programmable busy override chirp acknowledgement is heard.
5. If a grant is received, you should note that not all of the members of the mode are engaged in the call. You will not be able to determine this. More sites may join the call, however, if members become available at these sites and the original call is still active.

Site Trunking

Site trunking occurs when a site is no longer able to participate in wide-area calls controlled by the zone controller. Radios operating in site trunking can only communicate with other radios at that site. All trunking features are still available. The radio will always be looking for a wide-area trunking site to lock onto if it roams into range of one.

1. When a site goes into site trunking, the radio receives this indication and displays.

SITE TRUNKING

2. The display will alternate between the current trunked mode and the site trunking display for as long as the radio remains in site trunking.
3. The radio will not be considered in site trunking if:
 - a. The zone controller determines that the site should no longer be in site trunking and the radio receives this indication, or
 - b. the radio is out of range, or
 - c. the radio enters failsoft operation.

STAT-ALERT FEATURES

This section outlines the Stat-Alert features that can be configured for your radio.





All references to what is shown on the display is only valid for GP580 radios. Throughout this section, the display below

PLANT POLICE

is used to indicate the radio's home display.

VIEWING YOUR RADIO'S ID NUMBER


To view your radio's ID number

1. Press  until *CALL* is displayed. ZONE MUTE CALL
2. Press  (the softkey below *CALL*).
3. The display shows the last ID number transmitted or received. ID: 1048
4. Press .
5. The display shows the last Group ID number transmitted or received. GROUP: 105
6. Press .

7. The display shows your radio's ID number. MY ID:1048

8. Press .

9. The display shows your radio's Group ID number. MY GRP:001

10. Press  to return the radio to the home display. PLANT POLICE

Note: If your radio has been so programmed, you can press the call button for quick access to view the last ID number transmitted or received. This takes you directly to step 3.

STAT-ALERT VOICE SELECTIVE CALL OPERATION

This feature provides a convenient way for a dispatcher to voice page an individual or group. Voice selective call decode also eliminates the need for you to listen to traffic that is of no concern to you. This is a per-radio feature, enabled on a per-mode basis, and available as individual call or group call.

Voice Selective Call is another method of unmuting a radio other than PL codes. Radios with Voice Selective Call may be programmed to unmute one of two ways:

1. (OR muting option) upon receiving proper PL code or a Selective Call, or
2. (AND muting option) upon receiving both proper PL code and Selective Call

Receiving a Voice Selective Call

1. When a call is received, the green LED flashes, and a one-time, two-beep alert tone is emitted; on the display, the call-received status annunciator (📞) flashes. A voice message will follow.

2. The display shows the incoming caller's ID number momentarily.

ID: 2350

3. Return the radio back to voice selective call operation by pressing the monitor button, or if so programmed, the radio can automatically reset to voice selective call.

4. The radio will return to the home display.

PLANT POLICE

Note: After answering a Voice Selective Call, the caller's ID number is stored in your radio as the "last ID number received".

- Two automatic-reset features are available for voice selective-call. These features reset the

radio to voice selective call when the automatic reset timer expires.

1. Automatic Reset Without Carrier Override

The automatic-reset timer will start after the last voice message is completed, or after the radio is dekeyed (you released the PTT switch).

2. Automatic Reset With Carrier Override

When a carrier is detected, the automatic reset timer will stop; when the carrier is lost, the automatic-reset timer will start over.




 
- Voice selective call automatic reset is cancelled when the monitor button is pressed, or when the mode is changed. The automatic-reset timer is started over if it was running when either a voice selective call was again decoded or a successful transmission was completed.

Making a Voice Selective Call (GP580 radios only)

There are four phases in making a Voice Selective call, namely

- initiating a Voice Selective call,
- entering the desired radio ID number,
- sending the radio ID number, and
- having the conversation.

Initiating a Voice Selective Call


1. Press  until **CALL** is displayed. 
2. Press  (the softkey below **CALL**).
3. The display shows the last ID number transmitted or received. 


Entering the Desired Radio ID Number

If the last ID number called is the desired number, go directly to step 5.

To enter a new number






 
- 4a. Enter the new four-digit ID number using the keypad.
- 4b. On the display, the old ID number disappears and the new digits appear as they are being entered.
- 4c. The cursor flashes indicating the location of the next number to be entered.

Note: Once you have started entering numbers, the  key functions as a backspace key. Pressing it causes the last digit entered to be erased, and the cursor moves to the left. When



the last digit is erased, an additional press of this key causes the last ID number transmitted or received to be displayed; pressing  shows the first member of the list.

- If automatic Selective Call is enabled, your radio will remain in Selective Call until you exit the mode. If automatic Selective Call is disabled in your radio, the radio will immediately exit Selective Call when you release the PTT.
- In both Selective Call and Call Alert, a * will match any number in the ID position. For example, paging ID 000* will page all IDs from 0000-0009. Paging **** will page all radios on the system.

To enter a number from the call list

- 4a. Press either  or .
- 4b.  takes you forward to the first or next member of the list;  takes you backwards to the last or previous member of the list.
- 4c. When at a member of the list, the display alternates between showing the member's name and ID number.  and 

To enter a number from a location in the call list

- 4a. Press either  or  to enter the call list.
- 4b. Enter the first digit of the location number. If there are fewer than 10 members in the list, go directly to step 4e.
- 4c. If there are 10 or more members in the list, the display shows “ID LOC#X_” (where X is the first digit). The cursor blinks to show the location of the second digit.
- 4d. Enter the second digit of the location number.
- 4e. The radio goes to that position in the list. The display alternates between showing the member’s name and ID number.

Alternates between

CW NORTH

and

ID: 2350

Note: The last member of the list is also the “last ID transmitted or received” at position “00” on the list.

- If you enter a location number that does not exist (for example, “15”), the display will show “INVALID ENTRY,” and the radio will sound an invalid-keypress tone and return back to step 4b of this procedure.


Sending the Radio ID Number

5. Press the PTT switch to transmit the ID number. If enabled, an alert tone will sound during the transmission of the radio ID number. After the alert tone, you may talk.

STAT-ALERT CALL ALERT OPERATION

Stat-Alert Call Alert is a per-radio feature that provides a convenient way for the dispatcher to page you through your radio. This is especially useful in noisy environments, or when you need to be away from your radio equipment.

Receiving a Call Alert Page

1. Upon receiving a Call Alert page, four alert tones sounds (repeats every 5 seconds).
2. The green LED lights up and the Call Received annunciator, , blinks indicating a call is received.
3. The display will show the Caller ID, and then alternates between the home display, and “PAGE RECEIVED”.
4. Press the PTT switch to answer the page. You may have to make a voice selective call, if the radio that paged you is on selective call mode.

- The display shows the current mode. The audible alert, LED and call received annunciator turns off.

FIRE DEPT

- The ID number of the radio that paged you is stored as “the last ID number received.”

Note: The green flashing LED, alert tone, and flashing annunciator will continue until the Call Alert is acknowledged (press PTT, or press and release the monitor button).

Making a Call Alert (GP580 radios only)


There are three phases in making a call alert, namely

- initiating a call alert,
- entering the radio ID number that you wish to page, and
- sending the call alert.

Initiating a Call Alert

- Press  until *PAGE* is displayed.

PAGE PHON VIEW

- Press  (the softkey below *PAGE*).

- The display shows the last ID number transmitted or received.

ID: 2350

Note: The same list is shared by both Call Alert and Selective Call features.

- If your radio has been so programmed, you can press the page button for quick access to the Call Alert feature. This will take you directly to step 3.

Entering the Radio ID Number that you wish to Page


The procedure for entering the Radio ID Number is exactly the same as the process outlined in the *Selective Call* section. Please refer to “Entering the Desired Radio ID Number” on page 57.

Sending the Call Alert

- Press the PTT switch to transmit the ID number.

If the page is unsuccessful

- 5a. If the called radio fails to acknowledge the alert, a low-pitched alert tone sounds and the display changes to “**NO ACKNOWLEDGE**”.

- 5b.** Press the PTT switch to send the ID number again, or press  to hang up and return to the home display.

If the page is successful

- 5a.** If you hear five beeps, the radio you are paging is on the air and has received your page.
- 5b.** The radio automatically returns to the home display

PLANT POLICE

PTT-ID

Stat-Alert PTT-ID is a per-mode feature describing an identification code transmission that is tied to the PTT switch. The ID code is automatically sent every time a voice transmission occurs (that is, the PTT switch is pressed). When PTT-ID comes before the voice transmission, you will hear a tone until the ID transmission is completed; this helps you avoid talking while the ID code is being transmitted. This tone can be disabled on a per-radio basis. Also, the ID code transmission can be programmed to follow the voice transmission.

RADIO CHECK

This feature allows the dispatcher to determine if a radio unit is on the air without disturbing the radio operator. This is a useful tool for the radio dispatcher to use for routine maintenance checks, or if there is reason to doubt the availability of a radio unit. When the dispatcher "checks" for the radio, the radio will receive the command and automatically acknowledge it. The transmit (red) LED will light when the radio sends the acknowledgement.

EMERGENCY OPERATION

Please refer to *Emergency Operation* on page 46.

NOTES

NOTES